


AREA 1



AREA 2

AREA 3

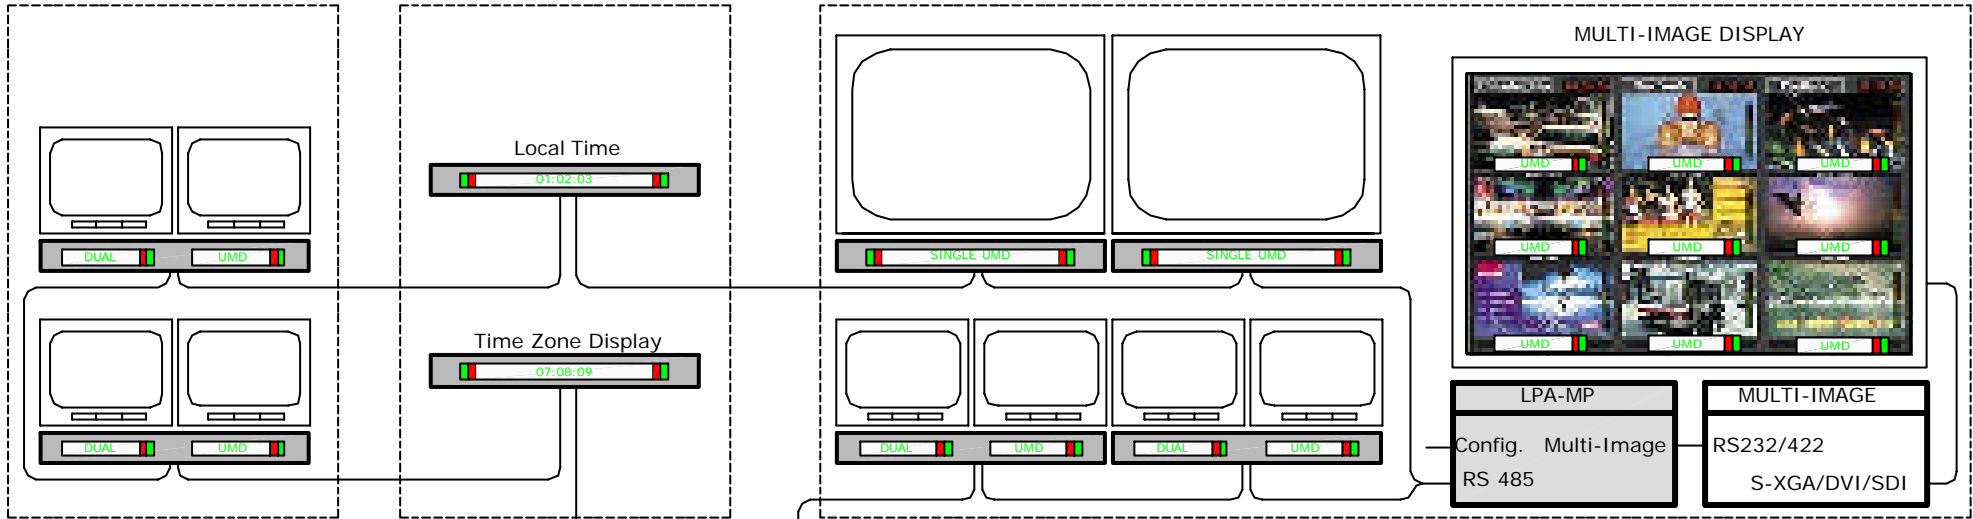


RS485 to other UMDs or Multi-Image



Station Time Code (LTC)

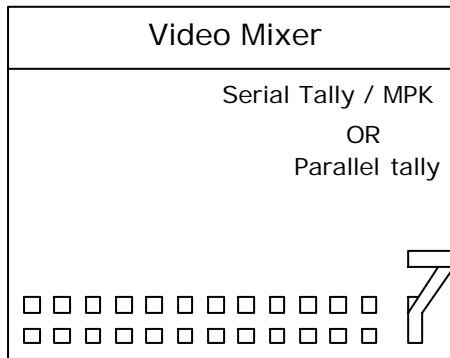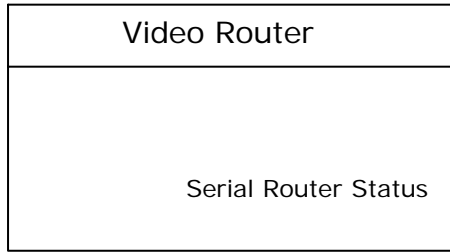



GPI: UMD dynamic/static
GPI: Emergency router

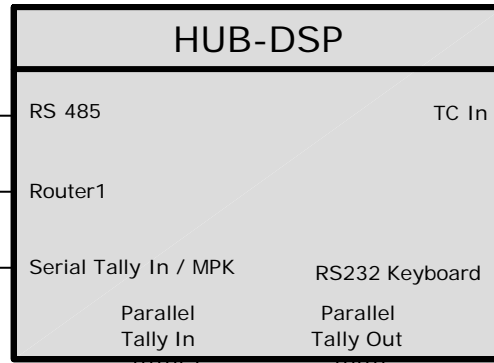

Tally to CCUs etc.

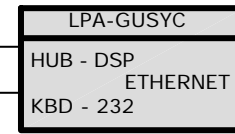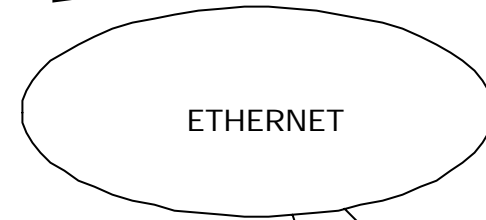

Optional

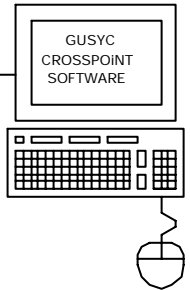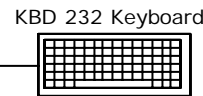

FOR CONFIGURATION ONLY
(Ethernet or RS232)

CROSSPOiNT	
TIT.:	UNDER MONITOR DISPLAY SYSTEM
DOC.:	UMD BLOQ DIAG MS ETHER.R4.dwg
CLIENTE:	REV 4
FECHA: 7- 2006	HOJA: 1 DE 1